


COREtec Plus® moldings are vinyl wrapped and feature a waterproof plastic core. The 72" long moldings, available in T-Mold and Overlap Reducer, easily snap into the included plastic strip.

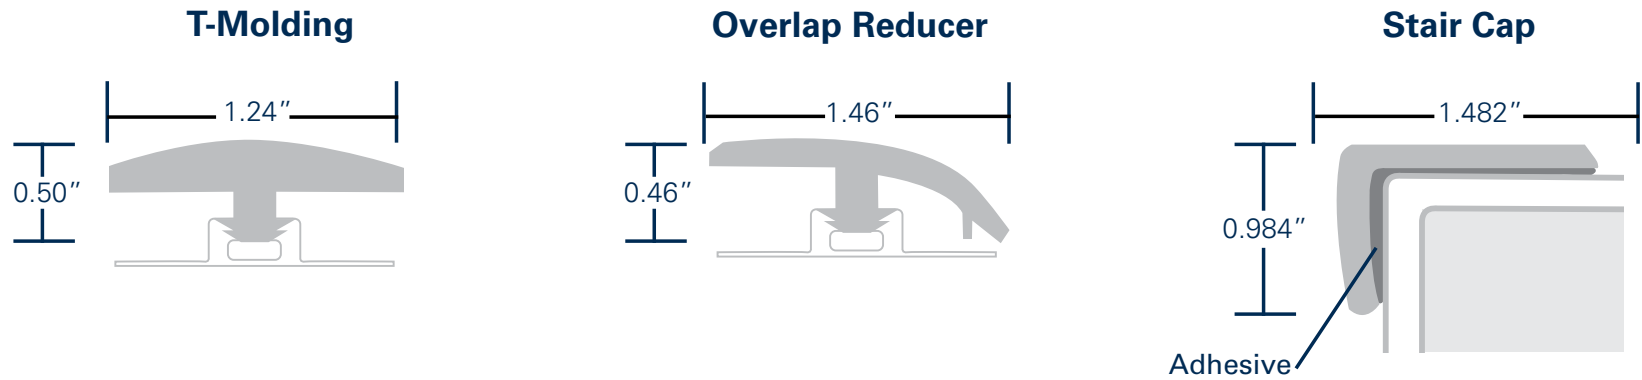

T-Mold and Overlap Reducer Installation Instructions

1. Measure & trim to fit.
2. Affix track to floor using adhesive, screws, or nails.
3. Insert molding into track. Tap down with rubber mallet.

Stair Cap Installation Instructions

1. Measure & trim to fit.
2. Affix track to stair edge using adhesive.
3. Follow adhesive manufacturer's instructions completely.

